

Switching states


Heating zone 2

Switch position			
K4			
0			
AUT	Closed-loop pump	Control mode colder	Control mode hotter


Heating zone 1

Switch position			
K4			
0			
AUT	Closed-loop pump	Control mode colder	Control mode hotter

Module – front view

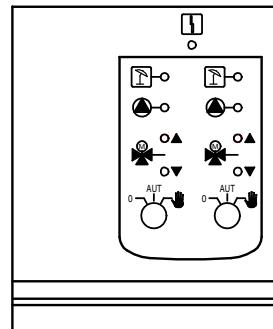

Internal BUS in control panel

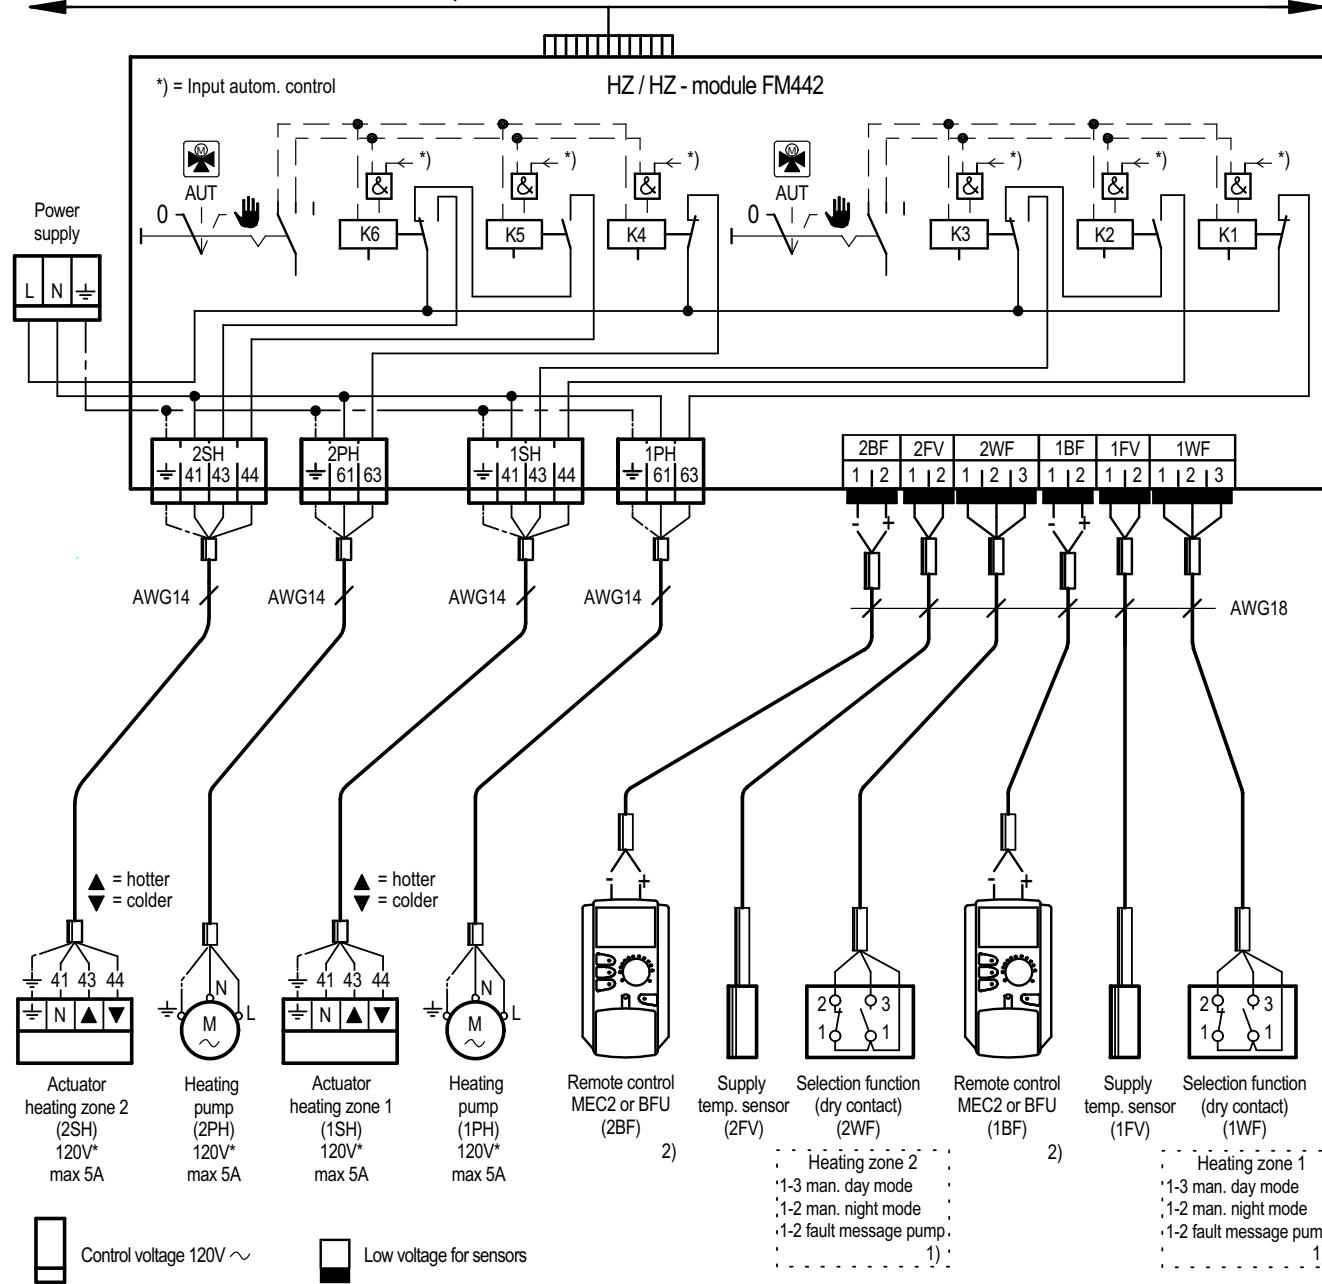

Installation examples (see back)

Legend:

HZ heating zone
THV thermostatic radiator valve

