

Switching states


Heating zone

Switch position			
	K1	K2	K3
0			
AUT	Closed-loop pump	Control mode colder	Control mode hotter


DHW circuit

Switch position		
	K4	K6
0		
AUT	Closed-loop pump	Closed-loop control

Module – front view

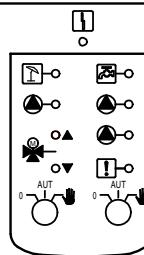

Internal BUS in control panel

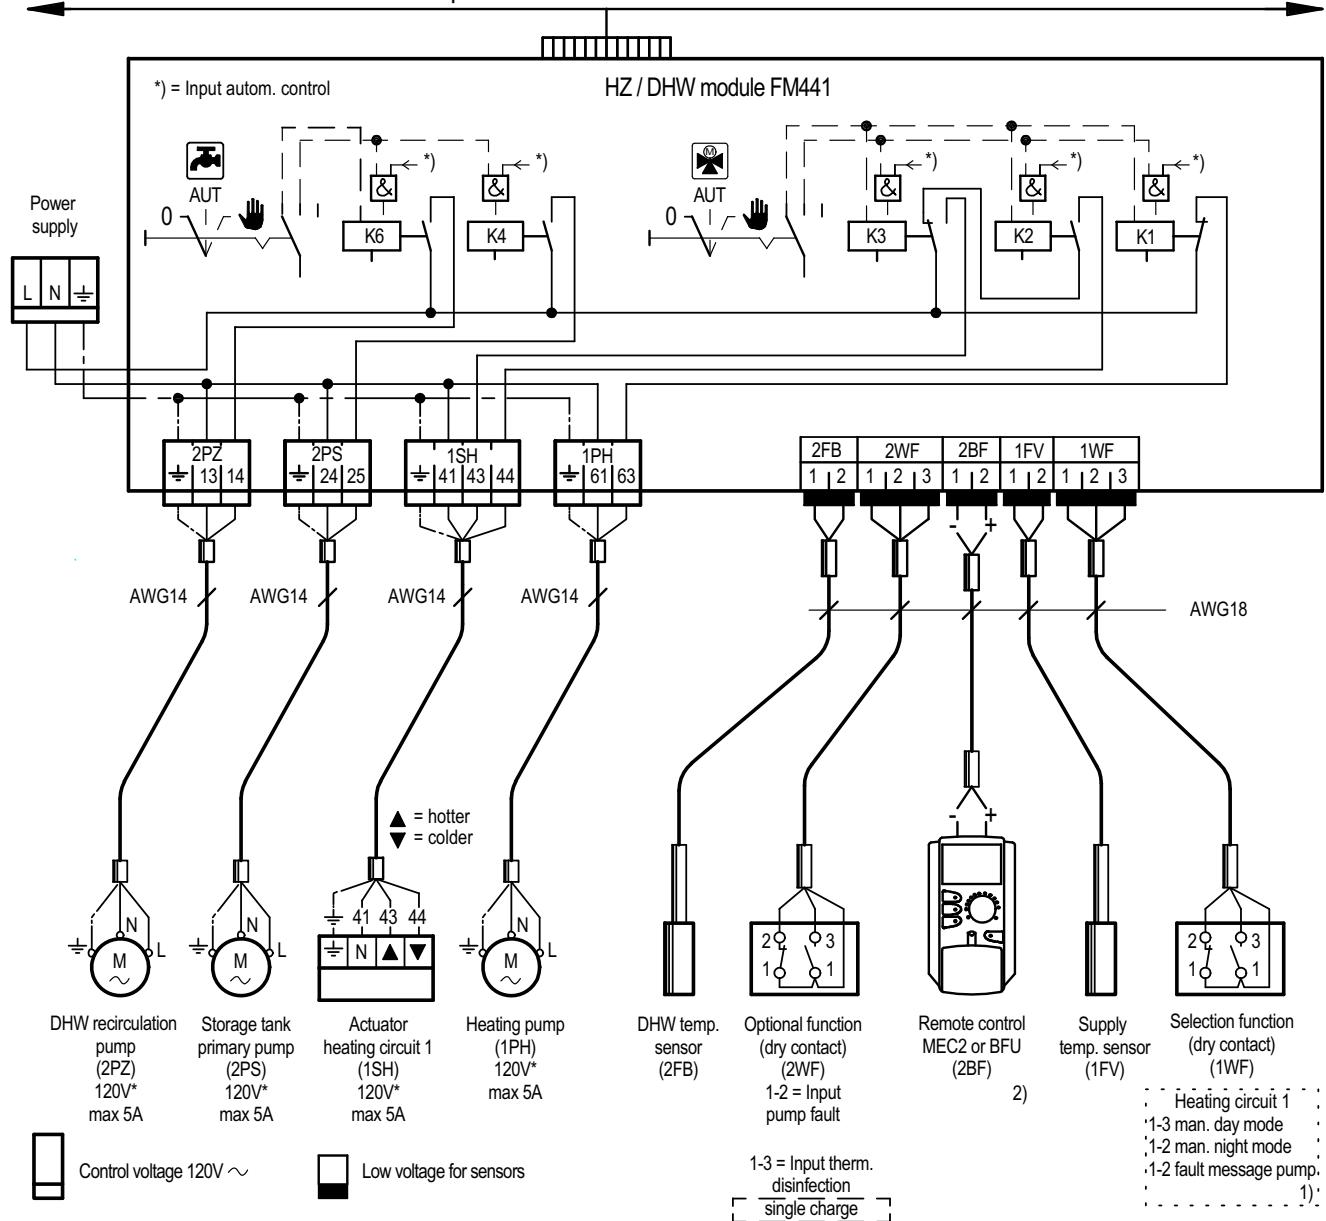

Installation examples (see back)

- Function only possible if no BFU is connected or no MEC2 is assigned.
- Please note! Only one MEC2 can be allocated to each control. The MEC2 can be plugged into the control module or, using the wall installation kit (optional), wired to the ZM or FM module.
- Total current for the modul can not exceed 10A.

Legend:

HZ heating circuit
 THV thermostatic radiator valve
 DHW DHW heating

