



**Note**  
 It is the installers responsibility to ensure that the system meets all applicable national and local codes. Protect the system with an appropriate circuit breaker and an emergency shutoff switch.  
 Never use the yellow-green ground wire as a control line.  
 Ensure proper polarity of phase and neutral.

1) Maximum current: 5A.