

Please follow the procedure below to configure the system before it becomes fully operational.

### Multi Zone M1M2 Communication Edge Multi IDUs Installations

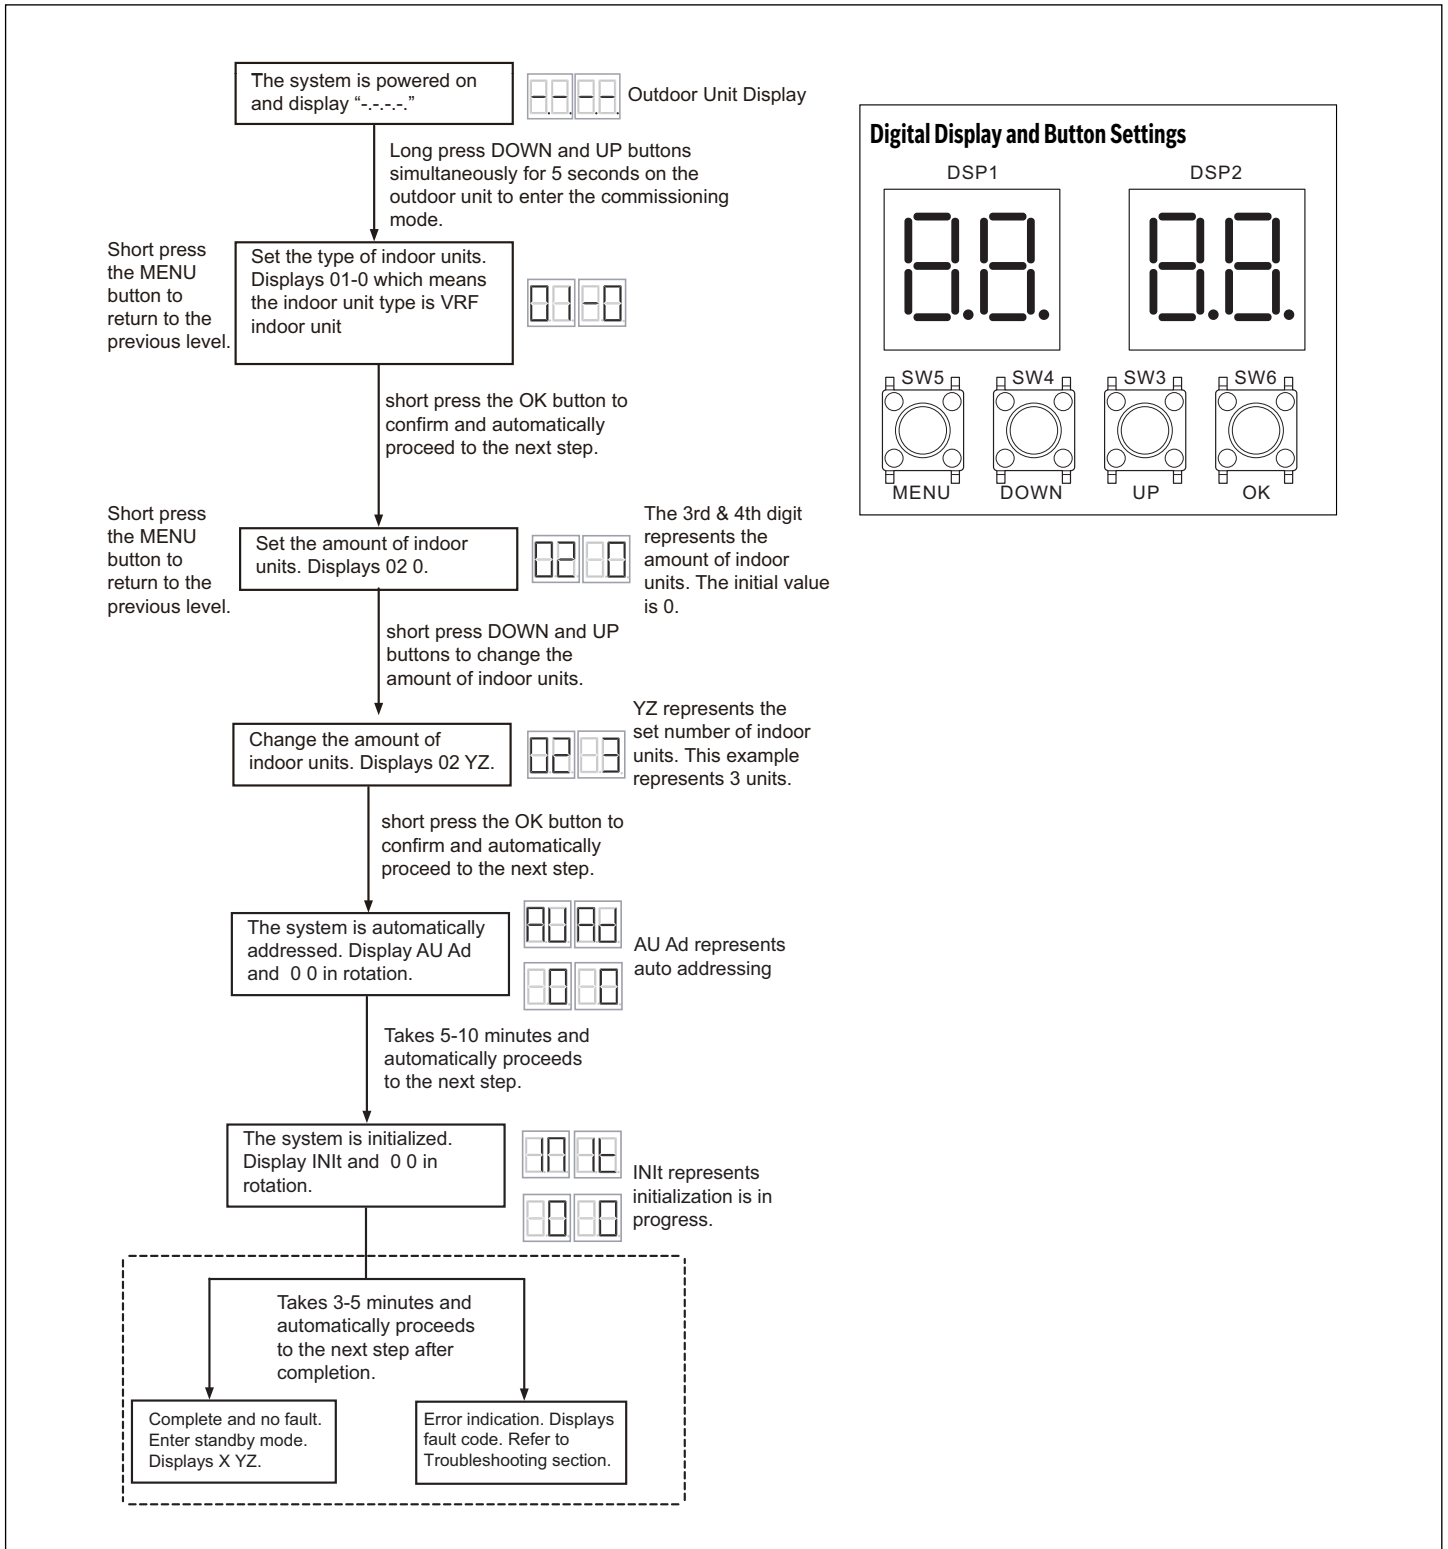


Figure 1

### Single Zone PQ Communication IDU (BIV\*20/97% Furnace) Installations

Please note that no commissioning process is required if the system is wired for a single-zone application with PQ communication (default). If the default configuration was incorrectly altered, please follow the procedure below.

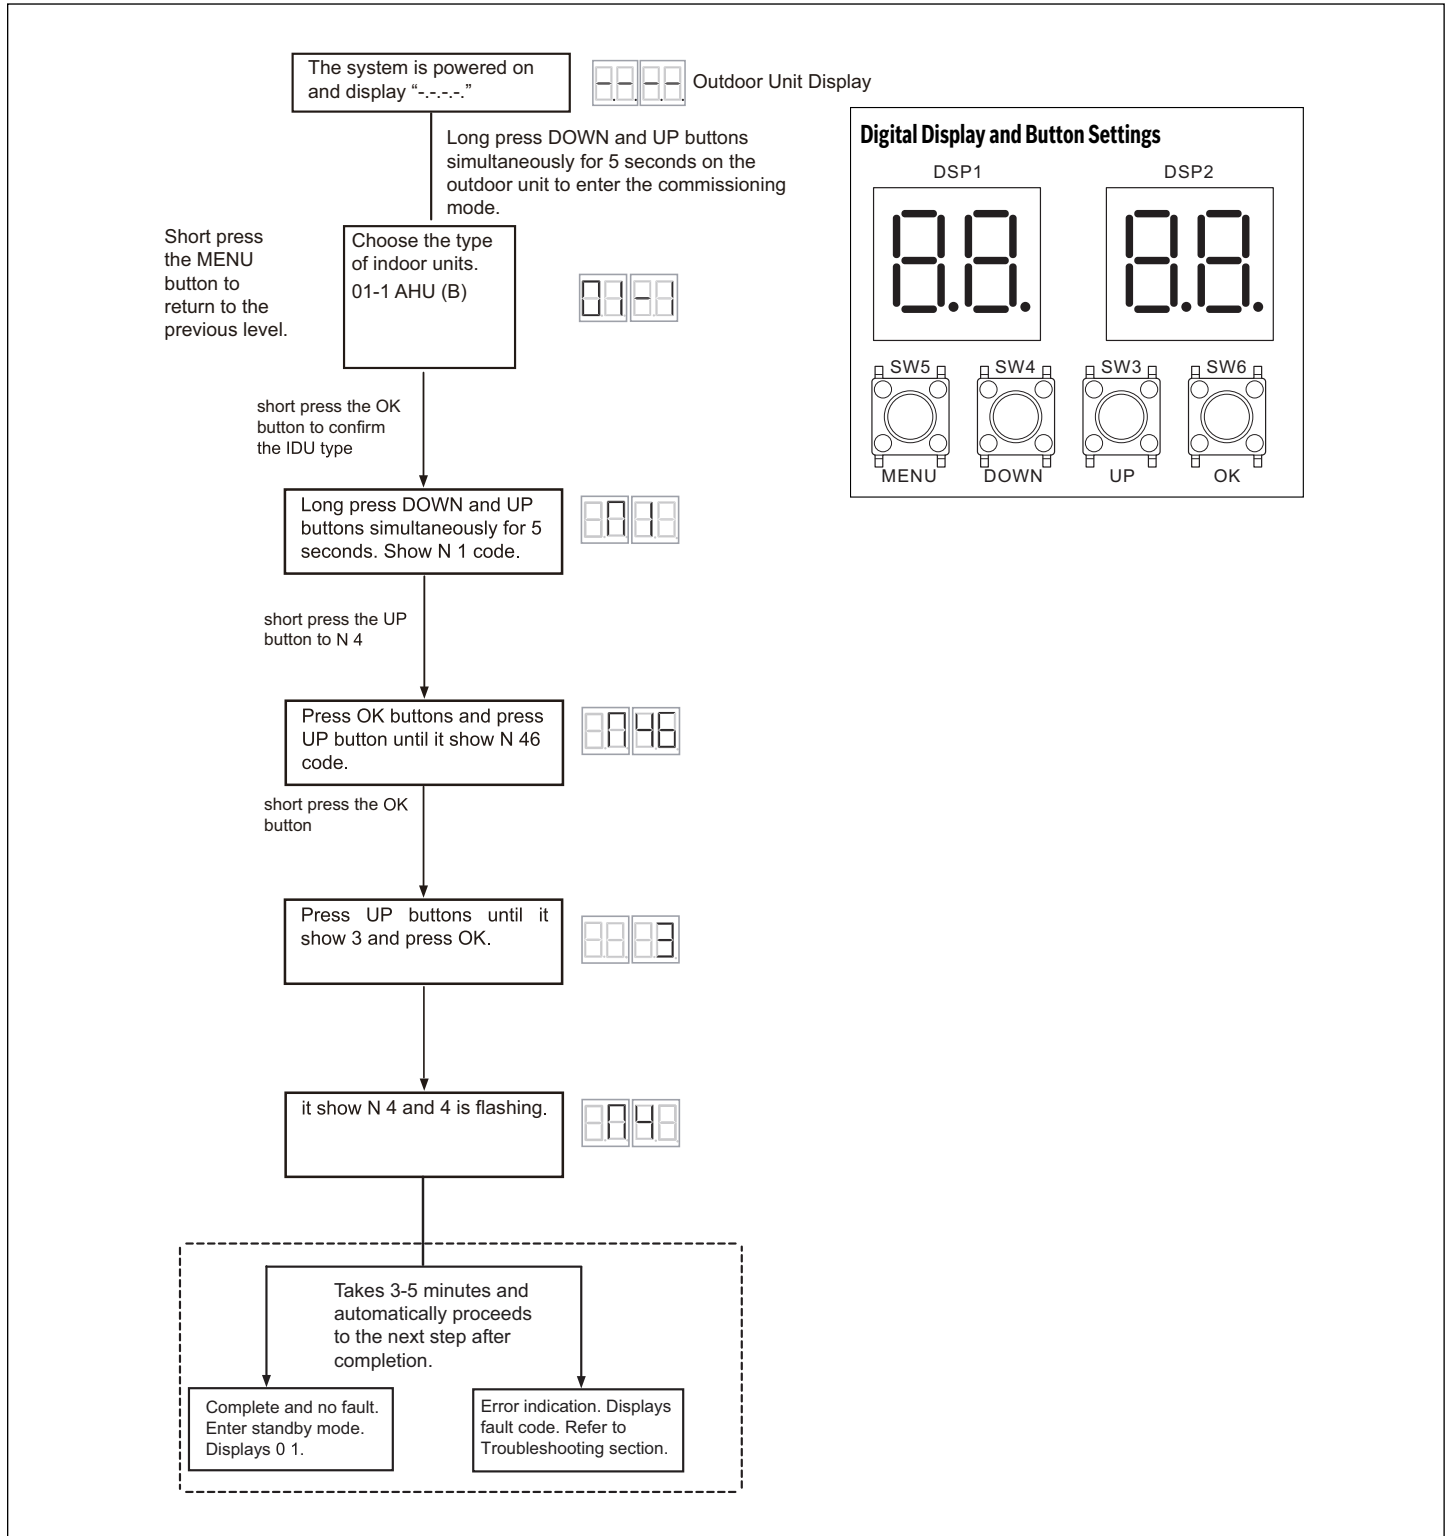


Figure 2