


Control voltage 120 V~ Extra-low voltage

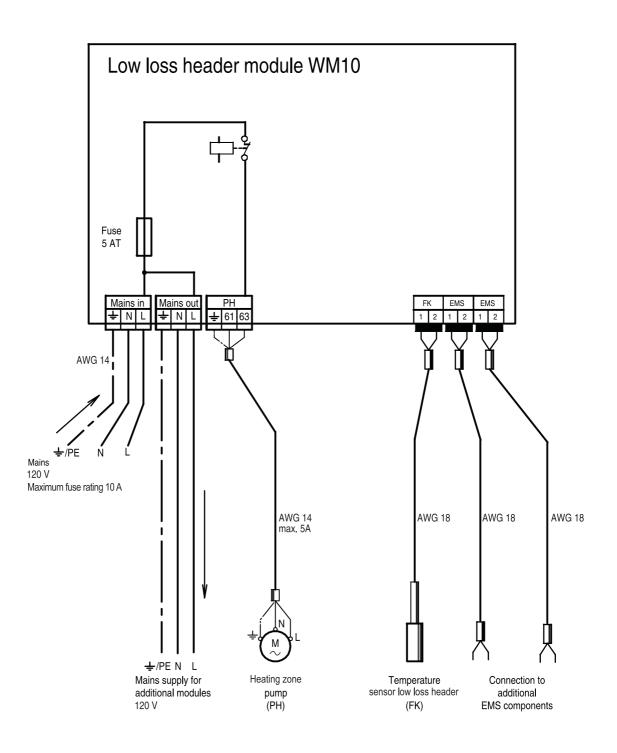

Note

It is the installers responsibility to ensure that the system meets all applicable national and local codes. Protect the system with an appropriate circuit breaker and an emergency shutoff switch.

Never use the yellow-green ground wire as a control line.

Ensure proper polarity of phase and neutral.

Low loss header module for EMS

Wiring diagram:

WM10

Ref. no.: 6720616949 | Proj. no.: 7696

Issue: 2008/04