How to Open Revit Files
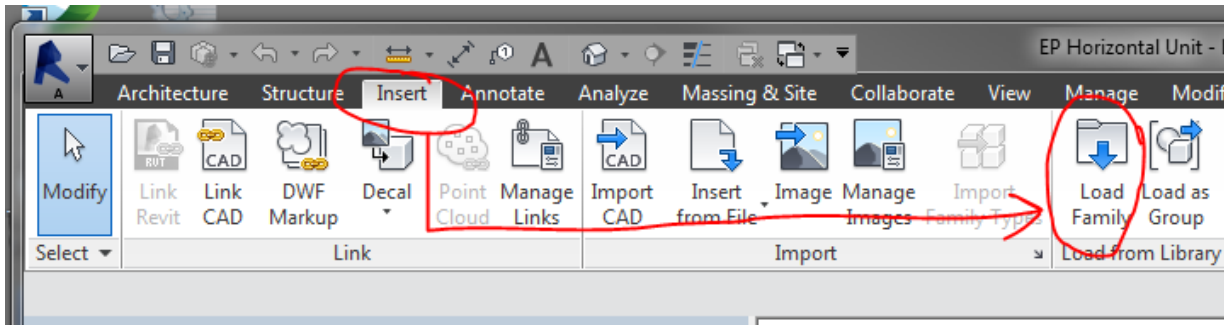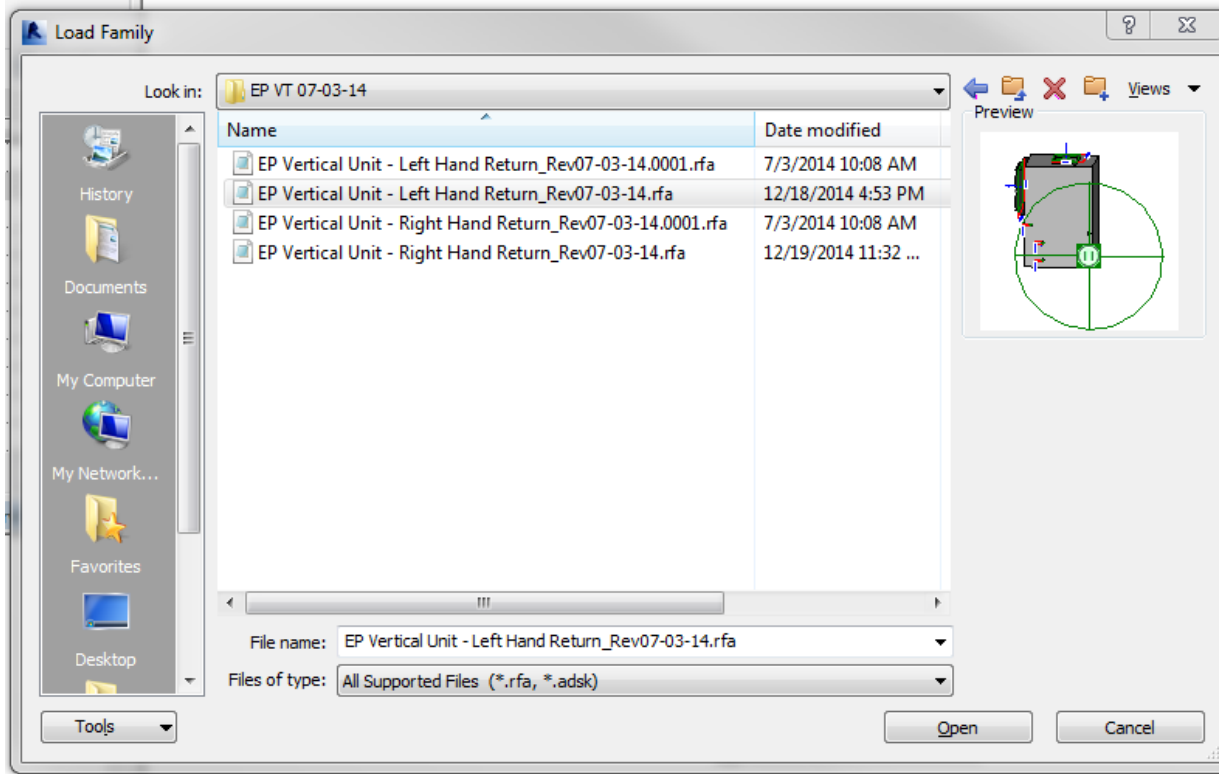
1. Create an .rvt project file — the main assembly of the structure would be this file
2. Click Insert and Load Family

BOSCH

How to Open Revit Files

3. Once in the Load Family command, find the file on your computer

BOSCH

How to Open Revit Files

Specify Types

Family:

EP Vertical Unit - Left Hand F

Types:

Type	Water_X_Offset_Bottom	Water_X_Offset	W_Y_EK_Offset	Voltage	V_Y_EK_Offset	U_X_EK_Offset	T_X_EK_Offset
(all)	(all)	(all)	(all)	(all)	(all)	(all)	(all)
EP007-1VT*-FLT	5.82	1.98	3.94	230.00 V	11.14	1.00	1.00
EP007-2VT*-FLT	5.82	1.98	3.94	265.00 V	11.14	1.00	1.00
EP009-1VT*-FLT	5.82	1.98	3.94	230.00 V	11.14	1.00	1.00
EP009-2VT*-FLT	5.82	1.98	3.94	265.00 V	11.14	1.00	1.00
EP012-0VT*-FLT	2.56	2.20	3.94	115.00 V	11.14	1.00	1.00
EP012-1VT*-FLT	2.56	2.20	3.94	230.00 V	11.14	1.00	1.00
EP012-2VT*-FLT	2.56	2.20	3.94	265.00 V	11.14	1.00	1.00
EP015-1VT*-FLT	2.50	2.31	3.94	230.00 V	11.14	1.00	1.00
EP015-2VT*-FLT	2.50	2.31	3.94	265.00 V	11.14	1.00	1.00
EP018-1VT*-FLT	2.50	2.31	3.94	230.00 V	11.14	1.00	1.00
EP018-2VT*-FLT	2.50	2.31	3.94	265.00 V	11.14	1.00	1.00
EP024-1VT*-FLT	2.31	2.11	3.94	230.00 V	11.14	1.00	1.00
EP024-2VT*-FLT	2.31	2.11	3.94	265.00 V	11.14	1.00	1.00
EP024-3VT*-FLT	2.31	2.11	3.94	230.00 V	11.14	1.00	1.00
EP024-4VT*-FLT	2.31	2.11	3.94	460.00 V	11.14	1.00	1.00
EP030-1VT*-FLT	2.62	2.31	3.94	230.00 V	11.14	1.00	1.00
EP030-2VT*-FLT	2.62	2.31	3.94	265.00 V	11.14	1.00	1.00
EP030-3VT*-FLT	2.62	2.31	3.94	230.00 V	11.14	1.00	1.00
EP030-4VT*-FLT	2.62	2.31	3.94	460.00 V	11.14	1.00	1.00
EP036-1VT*-FLT	2.62	2.31	3.94	230.00 V	11.14	1.00	1.00
EP036-3VT*-FLT	2.62	2.31	3.94	230.00 V	11.14	1.00	1.00
EP036-4VT*-FLT	2.62	2.31	3.94	460.00 V	11.14	1.00	1.00
EP042-1VT*-FLT	2.17	2.04	3.94	230.00 V	11.14	1.25	1.25
EP042-3VT*-FLT	2.17	2.04	3.94	230.00 V	11.14	1.25	1.25
EP042-4VT*-FLT	2.17	2.04	3.94	460.00 V	11.14	1.25	1.25
EP048-1VT*-FLT	2.17	2.04	3.94	230.00 V	11.14	1.25	1.25
EP048-3VT*-FLT	2.17	2.04	3.94	230.00 V	11.14	1.25	1.25
EP048-4VT*-FLT	2.17	2.04	3.94	460.00 V	11.14	1.25	1.25
EP060-1VT*-FLT	2.49	2.25	3.94	230.00 V	11.14	1.25	1.25
EP060-3VT*-FLT	2.49	2.25	3.94	230.00 V	11.14	1.25	1.25
EP060-4VT*-FLT	2.49	2.25	3.94	460.00 V	11.14	1.25	1.25
EP070-1VT*-FLT	1.64	1.64	3.94	230.00 V	11.14	1.25	1.25
EP070-3VT*-FLT	1.64	1.64	3.94	230.00 V	11.14	1.25	1.25
EP070-4VT*-FLT	1.64	1.64	3.94	460.00 V	11.14	1.25	1.25

Select one or more types on the right for each family listed on the left

[OK] [Cancel] [Help]

4. Select unit to load into project from file

3

BOSCH